



# GE Networx

## *quick reference guide*

1. Set your alarm when leaving home (motion detectors ON):
  - a. Close doors and windows until green ready light is on.
  - b. Press the EXIT button and the red armed light will come on.
  - c. Exit the premises through one of the entry/exit delay doors and close the door behind you.
  
2. Disarm the system (or cancel an accidental alarm):
  - a. Keypad will beep. You have 30 seconds to disarm.
  - b. Press the four-digit code and the red armed light will turn off
  
3. Set the alarm when at home with a delay (motion detectors OFF):
  - a. Close doors and windows until no zones show open and green ready light is on.
  - b. Press STAY. Red light will turn on.
  
4. Disarm before opening doors:
  - a. Press the four-digit code and the red armed light will turn off.
  
5. Set the alarm when at home with no delay (motion detectors OFF):
  - a. Press STAY button twice. Red armed light and red instant lights will turn on.
  
6. If an alarm has been triggered:
  - a. Before proceeding, verify that the alarm was triggered accidentally. If you aren't sure, wait for the phone call from central station.
  - b. If accidental, enter the four-digit code. This will silence the alarm and cancel dispatch.

*Continued on Back*

7. To change your four-digit Master Code:
  - a. Press \* 5
  - b. Enter four-digit Master Code
  - c. Press 0 then 1
  - d. Enter new four-digit Master Code
  - e. Press #

*The manufacturer of your security system recommends that you test it weekly to ensure that the system is communicating fully with the Monitoring Station in the event that an alarm is triggered. If for any reason you feel your security system is not functioning properly, do not hesitate to call our office at 770-963-0305. We have technicians available to assist you twenty-four hours per day.*